




## **ECHO POP 22-004478-01 Smart Speaker User Manual**

[Home](#) » [ECHO POP](#) » **ECHO POP 22-004478-01 Smart Speaker User Manual** 

 
**ECHO POP 22-004478-01 Smart Speaker**



## Contents

- [1 MEET YOUR ECHO POP](#)
- [2 SET UP YOUR ECHO POP](#)
- [3 LEARN ABOUT THE LIGHT BAR](#)
- [4 PRIVACY AND SUPPORT](#)
  - [4.1 PRIVACY CONTROLS](#)
  - [4.2 MANAGE YOUR VOICE HISTORY](#)
  - [4.3 CUSTOMER SUPPORT](#)
- [5 THINGS TO TRY WITH ALEXA](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## MEET YOUR ECHO POP

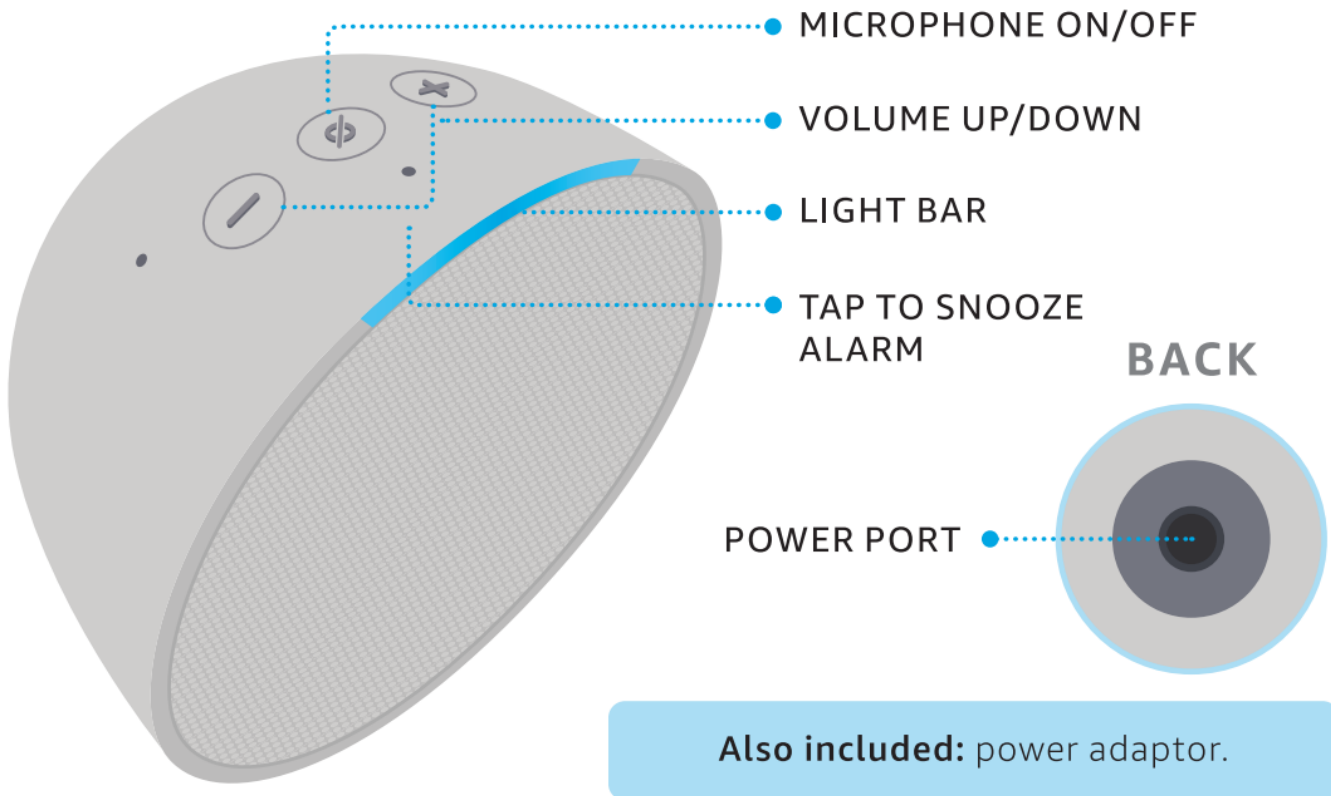

## SET UP YOUR ECHO POP

### 1. DOWNLOAD ALEXA APP FROM APP STORE



Log in with an existing Amazon account username and password, or create a new account.

**Note:** Be sure to turn on your phone's Bluetooth capability and have your Wi-Fi password ready.


### 2. PLUG IN YOUR ECHO POP



Use the included power adaptor. A blue light ring will flash on the device. In about a minute, Alexa will tell you to complete setup in the app.

### 3. FOLLOW SETUP IN THE APP



If you aren't prompted to set up your device after opening the Alexa app, tap the More  icon to add your device manually.

The app helps you get more out of your Echo Pop. It's where you set up calling and messaging, manage music, lists, settings and enable compatible smart home devices.

For help and troubleshooting, go to Help & Feedback in the Alexa app or visit [amazon.com/devicesupport](https://amazon.com/devicesupport).

## LEARN ABOUT THE LIGHT BAR

By default, Alexa doesn't begin listening until your Echo device hears you say "Alexa."

- Alexa is now listening.



# BLUE

- Microphone is off.  
Alexa can't hear you.



# RED

- Your device is in setup mode or is trying to connect to the Internet.



# ORANGE

- Your device is in Do Not Disturb mode or unable to connect to Wi-Fi during initial setup.



# PURPLE

- You have a new notification. Say “Alexa, read my notifications.”



# YELLOW

- You have an incoming call. Say “Alexa, answer the call.”



# GREEN

## PRIVACY AND SUPPORT

### PRIVACY CONTROLS

Turn the microphone off by pressing the microphone on/off button.



### MANAGE YOUR VOICE HISTORY

You can view, hear and delete the voice recordings associated with your account in the Alexa app at any time. To delete your voice recordings, try saying:

“Alexa, delete what I just said.”

“Alexa, delete everything I’ve ever said.”



### CUSTOMER SUPPORT

For help and troubleshooting, go to Help & Feedback in the Alexa app or visit [amazon.com/devicesupport](https://amazon.com/devicesupport).



**You have control over your Alexa experience.**

Explore more at [amazon.com.au/alexaprivacy](https://amazon.com.au/alexaprivacy).

## THINGS TO TRY WITH ALEXA

### ENJOY YOUR FAVOURITES



“Alexa, play today’s hits.” 11Alexa, read my book from Audible.”

“Alexa, volume up.”

### STAY ON TRACK



“Alexa, set a music alarm for 7 a.m. every Tuesday.”

“Alexa, reorder paper towel.”

“Alexa, set a 5-minute timer.”

### STAY INFORMED



“Alexa, what’s the weather today?”

“Alexa, play the news.”

### STAY CONNECTED



11Alexa, what’s on my calendar?”

1’Alexa, announce dinner is ready.”

Start by asking "Alexa, what can you do?"

You can also stop a response at any time by saying "Alexa, stop."

## GET ANSWERS



"Alexa, how do you spell beautiful?"

 
 
"Alexa, what time is it?"

## CONTROL YOUR SMART HOME




"Alexa, turn on the lamp."

"Alexa, turn on the fan."

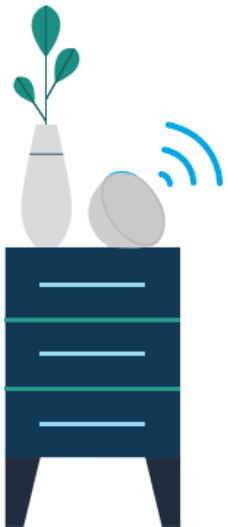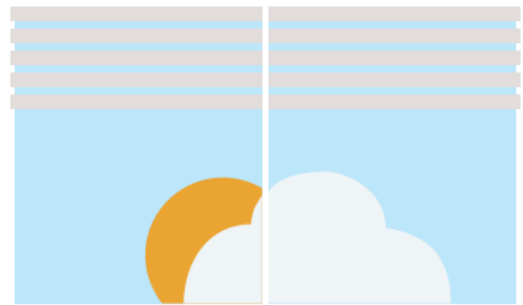

**Documents / Resources**

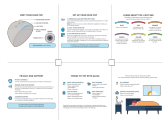 

[ECHO POP 22-004478-01 Smart Speaker](#) [pdf] User Manual  
22-004478-01 Smart Speaker, 22-004478-01, Smart Speaker, Speaker

[Manuals+](#)