


Wireless Bluetooth Speaker




Model NO.: SoundBox S1
User Manual

 
Introduction

Thank you for shopping with DOSS! The DOSS SoundBox S1 is a must-have for outdoor and indoor use. With its powerful, colorful LED lights, TWS features, and an upgraded impedance stereo system, the SoundBox S1 will bring you more pleasure to the next-level. Please read, follow, and keep the following instructions on hand for future reference.

Illustration




Buttons and Controls

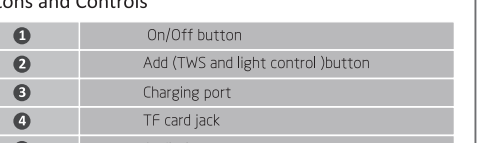

1. Power button
2. Add TWS and light control button
3. Charging port
4. TF card jack
5. Auto-on/stop button
6. Mode button
7. Play/hand free button
8. Left arrow
9. Right arrow
10. Volume control button

 Indicators

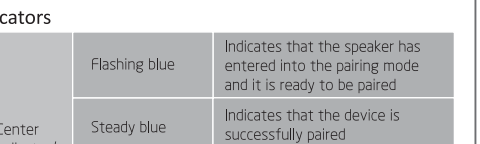

Flashing blue: Indicates that the speaker has entered into the pairing mode and it is ready to be paired.

Steady blue: Indicates that the device is successfully paired.

Steady red: Indicates that the device has switched to the auxiliary input mode.

Steady Green: Indicates that the device has switched to the TF mode.

OFF: If there is no operation in 10 seconds.

Steady red: Charging

OFF: Fully charged

Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer using USB port of the onboard adapter. Please refer to the instruction of USB.
- Make sure the speaker is fully charged before using it for the first time.
- LED light will remain RED when charging and turn off once fully charged.
- Note:
 - If the speaker beeps every five seconds, please recharge it for 4-5 hours.
 - The speaker has a built-in battery over mode, where it will automatically power off if not in use for 15 minutes. This function can be removed with a firmware upgrade. For assistance, please contact: support@dossonline.com

Operations

• MultiFunctional buttons


You want to	How to do
Turn On/Off	Press power button
Disconnect the device	Tap and hold Play/hand free button
Reconnect with last device	Tap Play/hand free
Play/Phone	Tap Play/hand free
Volume up	Rotate your finger clockwise
Volume down	Rotate your finger counterclockwise

• Pair your speaker with your smart device

 
1. When using the audio input mode, control audio playback using the smart device.
2. When the power button and light for a few seconds to turn the speaker on. Upon powering on, a tone will be heard; the blue LED starts flashing, and it will be accompanied by a prompt response. The speaker has entered into the pairing mode.
3. Turn on Bluetooth on your device and choose SoundBox S1 in the list of the pairing lists after 10 seconds, please press the A/P the pairing is successful. The LED will change to solid blue. If the pairing fails after 10 seconds, please press the Play/hand free button for 5 seconds and try again.
4. After the pairing is successful, the speaker will disconnect the Bluetooth mode.
5. Note: If your smart device cannot discover the SoundBox S1, please long press the Play/hand free button and then try again.

• How to connect problems via Bluetooth?

1. Make sure your device is within 1 meter from the speaker.
2. Make sure the Bluetooth pairing is on your device.
3. Make sure the speaker is in pairing mode.
4. Make sure the speaker is not in pairing mode.
5. Make sure the speaker is not in pairing mode.
6. Make sure the speaker is not in pairing mode.
7. Make sure the speaker is not in pairing mode.
8. Make sure the speaker is not in pairing mode.
9. Make sure the speaker is not in pairing mode.
10. Make sure the speaker is not in pairing mode.



Wireless Bluetooth Speaker




Model NO.: SoundBox S1
User Manual


Introduction

Thank you for shopping with DOSS! The DOSS SoundBox S1 is a must-have for outdoor and indoor use. With its powerful, colorful LED lights, TWS features, and an upgraded impedance stereo system, the SoundBox S1 will bring you more pleasure to the next-level. Please read, follow, and keep the following instructions on hand for future reference.

 Illustration




Buttons and Controls

 

1. Power button
2. Add TWS and light control button
3. Charging port
4. TF card jack
5. Auto-on/stop button
6. Mode button
7. Play/hand free button
8. Left arrow
9. Right arrow
10. Volume control button

 Indicators



Flashing blue: Indicates that the speaker has entered into the pairing mode and it is ready to be paired.

Steady blue: Indicates that the device is successfully paired.

Steady red: Indicates that the device has switched to the auxiliary input mode.

Steady Green: Indicates that the device has switched to the TF mode.

OFF: If there is no operation in 10 seconds.

Steady red: Charging

OFF: Fully charged

Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer using USB port of the onboard adapter. Please refer to the instruction of USB.
- Make sure the speaker is fully charged before using it for the first time.
- LED light will remain RED when charging and turn off once fully charged.
- Note:
 - If the speaker beeps every five seconds, please recharge it for 4-5 hours.
 - The speaker has a built-in battery over mode, where it will automatically power off if not in use for 15 minutes. This function can be removed with a firmware upgrade. For assistance, please contact: support@dossonline.com

Operations

• MultiFunctional buttons

You want to	How to do
Turn On/Off	Press power button
Disconnect the device	Tap and hold Play/hand free button
Reconnect with last device	Tap Play/hand free
Play/Phone	Tap Play/hand free
Volume up	Rotate your finger clockwise
Volume down</	

[illegible]