



## Marshall EMBERTON II Bluetooth Portable Speaker User Manual

[Home](#) » [Marshall](#) » Marshall EMBERTON II Bluetooth Portable Speaker User Manual 

Marshall EMBERTON II Bluetooth Portable Speaker




## Contents

- 1 DEVICE LAYOUT
- 2 GENERAL
- 3 INSTRUCTIONS
  - 3.1 BLUETOOTH PAIRING
  - 3.2 PERFORMING A FACTORY RESET
- 4 STACK MODE
- 5 TROUBLESHOOTING
- 6 Documents / Resources
  - 6.1 References
- 7 Related Posts

## DEVICE LAYOUT



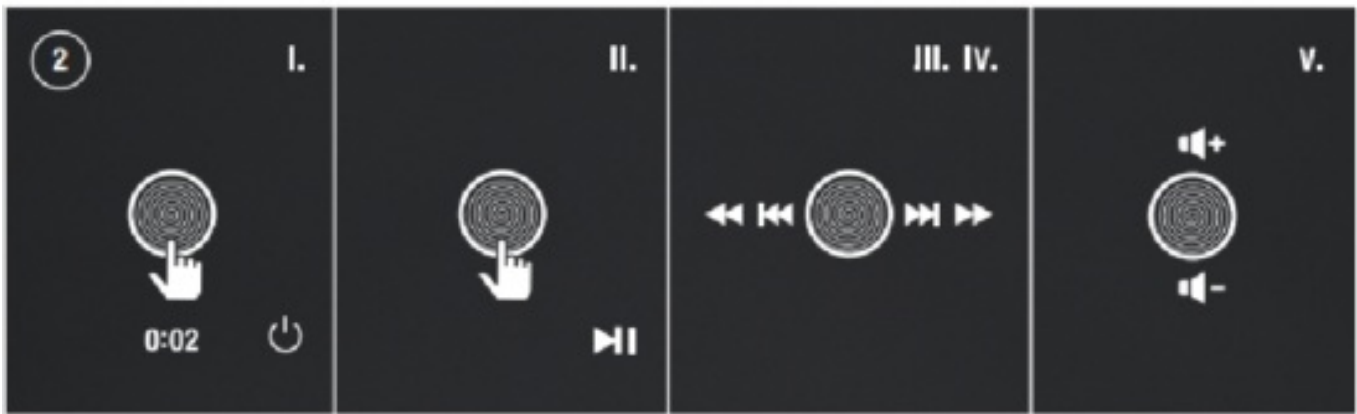

## GENERAL

### 1. BLUETOOTH BUTTON

Push and hold the Bluetooth® button until the LED turns to a slow red pulse to start pairing mode

### 2. CONTROL KNOB

- I. Push and hold for 2 seconds to turn on/off
- II. Push once to play/pause
- III. Push right/left to skip forward/back
- IV. Hold right/left to fast forward/rewind
- V. Hold upwards/downwards to adjust the volume

### 3. BATTERY INDICATOR

The 10 segment Battery indicator shows the battery charge with a steady light and a rising animation indicates charging

### 4. USB-C POWER INPUT

Charge the speaker by plugging it into a USB power source

## INSTRUCTIONS

### BLUETOOTH PAIRING

- I. Push and hold the control knob until the speaker turns on
- II. Push and hold the Bluetooth button until the LED turns to a slow red pulse
- III. Select Emberton II from your audio device's Bluetooth list

### PERFORMING A FACTORY RESET

A factory reset will reset the speaker to its original settings, excluding any firmware updates

**Note:** This will delete all user settings and the speaker will need to be set up again

- I. Ensure that the speaker is on
- II. Push and hold the Bluetooth button for 7 seconds All indicators turn off and the speaker restarts
- III. Remove Emberton II from your sound device's Bluetooth list before pairing again

## MARSHALL HEADPHONES APP

Download the Marshall headphones app to get the most out of your speaker and keep it up to date with the latest software



## STACK MODE

Connect two or more Emberton II speakers in a Stack session for a bigger sound Play anything on the main speaker and all speakers in the session will play in sync You can adjust the volume on any individual speaker for the perfect balance

### 1. MAIN SPEAKER

Triple press the Bluetooth button to start or end a Stack session The LED starts to blink until any other speaker joins the session

### 2. ADDITIONAL SPEAKER

Double press the Bluetooth button on any speaker you want to add to the session The LED starts to blink until the speaker has joined a session While in a session, the speaker will disconnect from any previously connected audio device and will try to reconnect after leaving the session

To remove a speaker from the session, double press the Bluetooth button on that speaker'



## TROUBLESHOOTING

<b>PROBLEM</b>	<b>CAUSE</b>	<b>ACTION</b>
The speaker does not turn on	The battery has no charge.	Plug the speaker into a USB power source to charge it.
Cannot connect or pair with a Bluetooth device	Bluetooth is not enabled on your device (phone or computer),	Activate Bluetooth on your audio device.
Bluetooth connection drops out	The speaker is not turned on.	Push and hold the control knob for 2 seconds to turn on the speaker before setting it in pairing mode.
Cannot play in Stack mode	The Bluetooth devices are too far apart, or the connection is affected due to obstacles.	Move the devices closer to each other so that they are unobstructed by obstacles such as walls or doors.
Bluetooth connection drops out	The playback device is not connected to the main speaker.	Move the devices closer to each other so that they are unobstructed by obstacles such as walls or doors.
Erratic behaviour	There is a strong electric field surrounding the speaker. Items such as microwaves, wireless network adapters, fluorescent lights and gas cookers use the same frequency range as the Bluetooth device. This may lead to electrical disturbances.	Make sure that your playback device (phone or computer) is paired with the main speaker.
Bluetooth connection drops out	The speaker is not using the latest firmware version.	Move the speaker to another spot or turn off or move the interfering electronic device.
Erratic behaviour	There is a software error.	Download the Marshall Bluetooth app and connect to the speaker. Follow the in-app instructions to ensure that the speaker has the latest firmware version.
	There is a software error.	Perform a factory reset by pressing the Bluetooth button for 7 seconds. The speaker needs to be set up again



[MARSHALLHEADPHONES.COM](http://MARSHALLHEADPHONES.COM)



[Marshall EMBERTON II Bluetooth Portable Speaker](#) [pdf] User Manual  
EMBERTON II, Bluetooth Portable Speaker

## References

- [Official Marshall Headphones & Speakers Store | Marshall](#)