
## Quick start guide.

feeder-robot by whisker





online experience and tips on acclimating your pet, please scan the QR code or visit feeder-robot.com/gettingstarte

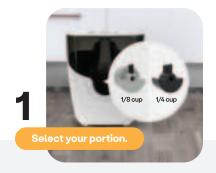

- Choose either the 1/8-cup or 1/4-cup dispenser to select your minimum portion size.
- The 1/4-cup dispenser comes pre-installed and can serve 1/4 cup to 1 cup of food per meal. The 1/8-cup dispenser can serve 1/8 cup to 1/2 cup of food per meal.



- Plug in the unit BEFORE adding food.
- The power input is located underneath the unit.
- Optional: Wipe clean any unit components that touch pet food. (All parts that contact pet food are made of BPA-free, FDA food-safe plastics.)



- Add only dry or semi-moist pet food.
- Use small- or medium-sized kibble.
- Make sure food is level.

Important: Ensure that the narrow end of the food bowl is placed under the food ramp lip so that the bowl fills properly.



Choose a feeding mode.

App Mode: This highly customizable automatic feeding schedule programmed via the app can dispense 1/8 cup to 1 cup of food, 1 to 8 times per day. Download the Whisker app and follow the onboarding instructions.







- Gravity Mode: This automatic feeding schedule ensures that the food bowl stays full by attempting to feed every 6 hours. Press the Gravity Mode button to enable or disable Gravity Mode.
- Control Panel Mode: This automatic feeding schedule can dispense 1/8 cup to 1 cup of food, 1 to 4 times per day. Press the Portion button once to see the current setting. Press again (within 2 seconds) to increment the number of portions per meal. Press the Meals button once to see the current setting. Press again (within 2 seconds) to increment the number of meals served in a 24-hour period. The unit will dispense the first meal immediately after completing meals setting.